


User Manual

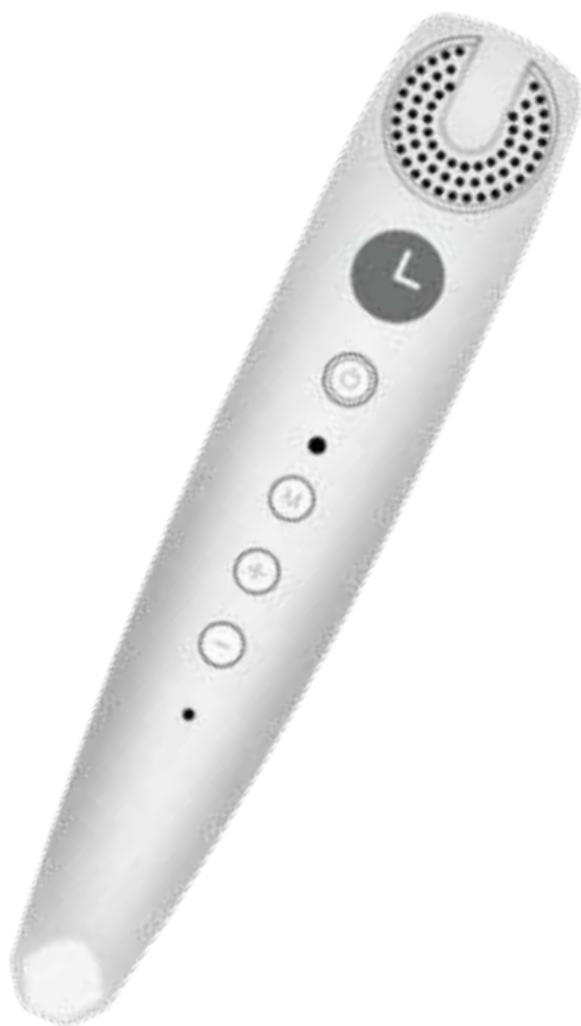

Eltee Pen™


Included in the box:



Eltee Pen



User Manual

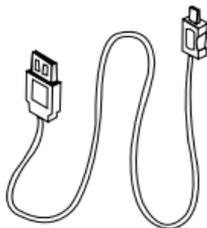


USB Cable

Features and Functions


1. Turning on: To turn on your Eltee Pen press and hold the power button for 3 seconds until the light flashes and you hear, "Hello, I'm Eltee."
2. Turning off: To turn off your Eltee Pen, hold the power button for 3 seconds until the light switches off and you hear 'Good bye, see you soon'.
3. Auto off: To save battery power, your Eltee Pen will automatically switch off if it is unused for more than 3 minutes.
4. Record: A long press of the record button will turn the light on. This indicates that recording is activated. To record your voice clearly, bring your Eltee Pen close to your mouth. To stop recording, release the same button again. When the light goes off, this indicates that recording has stopped. To listen to the recorded voice, press and release the same button. Please note the maximum recording time is one minute and every new recording deletes the previous one.

5. Volume: There are 5 levels of sound volume. The default level is set at 3. Each press of the volume button (+) will increase the volume. Each press of the volume button (-) will decrease the volume.
6. Audio Out: You may connect external speakers or headphones using a standard audio cable (not provided).
7. SD Card: Please do not remove the SD card from the Eltee pen.
8. USB power: Just like your phone you can charge the Eltee Pen with the USB cable provided, and you can use the Pen while connected with power or when it's disconnected.

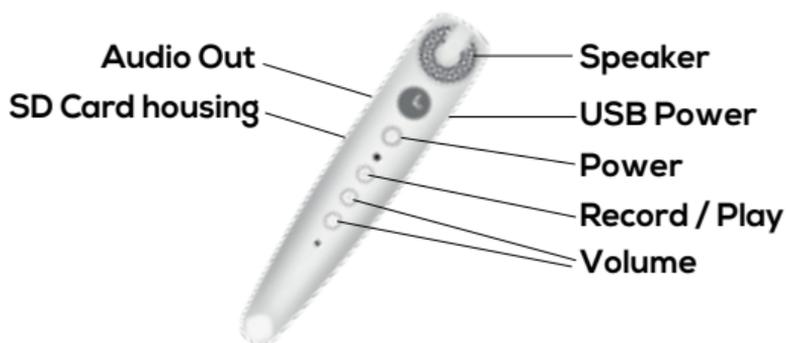

Using Eltee Pen with Power Supply

1. When connected to the power, the red light will turn on. Push the Power button. When you hear, "Hello! I'm Eltee." your Eltee Pen is ready to use.

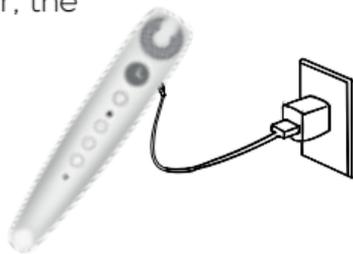

2. Please avoid connecting the USB cable to your computer, as there is a risk of accidentally deleting data from your Eltee Pen.

Using Eltee Pen with Compatible Books

1. Activation: Each book has an activation icon on the first page (as shown in the image). After switching on the Eltee Pen, scan the icon to activate the Pen for that particular book. You will hear a welcome message. Repeat this step every time you want to use your Eltee Pen with a compatible book.
2. Select a language: After activation, you can select from one of the languages provided below.
3. Sound Icons: There are sound icons on every page. When you scan these icons with your Eltee Pen, a sound will play.
4. Take care not to push or scratch the head of the pen on the pages, as this may damage the sound icons.



Troubleshooting

1. No sound: If you can't hear any sound, please check whether the Eltee Pen is switched on. The power light should be on when the Eltee Pen is switched on. If the Pen is on and there is still no sound, check the volume.
2. Sounds do not match with the content: This usually means you have not activated the Eltee Pen for that particular book. Please activate your Eltee Pen with your chosen book, and try again.
3. Power light goes red: This means your Eltee Pen is running low on battery. Connect to a power supply.
4. Audio-out does not work: When your Eltee Pen is connected to an external speaker through an audio cable, and no sounds play, this usually suggests a problem with the audio cable or the external speaker. Check the audio cable and the external speaker are working well with other audio devices.
5. Headphones do not work: If you connect your Eltee Pen with headphones, but cannot hear any sounds, this usually suggests a problem with the headphones. Check if the headphone is working well with other audio devices.

Once you have established that there is a problem with the Eltee Pen itself, please contact your local distributor.

Caring for Eltee Pen

1. Eltee Pen is not a toy and should only be used under adult supervision.
2. Eltee Pen is a sensitive electronic device with an optical scanner inside its nib.
3. The Eltee Pen should not be dropped; immersed in liquid; kept in direct sunlight; or stored in sandy, dusty or extreme temperatures.

Product Specifications

- Memory Card: 16 GB
- Size: 149mm x 280mm x 130mm
- Weight: 37.5g
- Battery: Li-ion Battery
- Sound Quality: 8Kbps~320Kbps
- Safe Temperature Range: 10 degrees to 45 degrees centigrade

Warranty

Your warranty is valid for one year from the date of purchase, as per the conditions below:

1. There's no need to register for warranty but please keep your invoice/receipt as a proof of purchase.
2. You will need to bring/send the product to your distributor at your cost, with the proof of purchase.
3. During the warranty period, you'll be entitled to free repair or replacement arising from defects in materials and workmanship of the product.
4. The warranty does not apply in case of damage caused by misuse, negligence, accident, inflow of any liquid, sand or dirt or excessive pressure that deformed or damaged the product.
5. The warranty will not apply if the product is modified, tampered with or repaired in any way by a third party.

Please feel free to contact Learning Time directly in case of any problems with the warranty:

www.learningtime.co

Learning Time, its agents, representatives or distributors shall not be liable for any loss, injury or damage, including consequential loss, injury or damage arising directly or indirectly out of, or in connection with, the service, delivery or use of the product, Eltee Pen.



www.LearningTime.co

© 2018 Motivate Educational Supplies FZC. All rights reserved.

'Learning Time', the clock logo device and all related titles, logos and characters are trademarks of Motivate Educational Supplies FZC or its licensors.